

# **ESP-LXD Controller**

# **ESP-LX Series Controllers**

The popular Rain Bird ESP-LX Series commercial controller line now includes a two-wire controller. The ESP-LXD controller has been designed to maintain the look, feel and ease of programming of the ESP-LX Series controllers but with an interface to a two-wire path for decoder-based irrigation. The ESP-LXD controller provides flow sensing and management and 50 station capacity expandable to 200 stations.

# **Applications**

The ESP-LXD provides flexible features and modular options that make the controller ideal for a wide variety of applications including lightcommercial, commercial and industrial irrigation systems. Options include a metal case and pedestal, ET Manager Smart Cartridge, NCC Network Communication Cartridges, and the PBC-LXD Programming Backup Cartridge. These options can easily be installed with the initial controller installation or when needed in the future.

#### Easy to Use

The ESP-LXD Controller utilizes the Rain Bird ESP Extra-Simple Programming user interface. The dial, switches, and buttons interface, which Rain Bird first introduced in the early 1990s, are easy to learn and use and have become a standard controller interface for the irrigation industry. The large LCD display incorporates softkey text labels for the button functions rather than dedicated buttons.

Multiple language support allows the end user or maintenance personnel to interface with the controller in his or her primary language. Userselectable languages include English, Spanish, French, German, Italian and Portuguese. Date, time and unit formats are also user-configurable.

# **Easy to Install**

The ESP-LXD Controller has a spacious case and eight lugs for up to four two-wire paths making installation fast and easy. Multiple size wiring knockouts are provided on the bottom and back side of the case to adapt to a wide variety of wiring applications. The door and front panel are removable so the case can be easily mounted to the wall.

# **Controller Features**

- Plastic, UV-resistant, locking, wall-mount case
- Uses the same decoder hardware as MDC, MDC2 and SiteControl

- Supported decoders: FD-101TURF, FD-102TURF, FD-202TURF, FD-401TURF, FD-601TURF
- Also supports SD-210TURF sensor decoders (flow sensing and weather sensor support) and LSP-1 line surge protectors (one per 500 feet of two-wire path required)
- 50-station capability standard expandable to 200 stations with optional ESPLXD-SM75 modules
- Four sensor inputs (one wired plus up to three decoder-managed) with override switch
- Program backup and barcode decoder address entry with the optional PBC-LXD
- Six user-selectable languages
- Removable front panel is programmable under battery power
- Optional LXMM metal case and LXMMPED metal pedestal
- Optional LXMMSS stainless steel case and LXMMSSPED stainless steel case
- Remote water management available using the IQ™ Platform and NCC Cartrigdes
- · Compatible with Rain Bird Landscape Irrigation and Maintenance Remote

#### **Water Management Features**

- Learn Flow utility and flow usage totalizer
- FloWatch™ protection for high and low flow conditions with user-defined reactions
- FloManager™ manages hydraulic demand, making full use of available water to shorten total watering time
- Programmable SimulStations™ allow up to 8 stations to operate at the same time
- Cycle+Soak<sup>™</sup> by station
- Rain Delay
- 365-Day Calendar Day Off
- Programmable Station Delay by program
- Up to 5 Normally Open or Normally Closed Master Valves programmable by station
- Up to 4 Weather Sensors programmable by station to prevent or pause watering
- Program & Monthly Seasonal Adjust

# **Diagnostic Features**

- Alarm light with external case lens
- · Electronic diagnostic circuit breaker
- Program summary and review
- Variable test program
- Two-wire diagnostics to simplify and expedite troubleshooting



# **Operating Specifications**

- · Station timing: 0 min to 12 hrs
- Seasonal Adjust: 0% to 300% (16 hrs maximum station run time)
- 4 independent programs (ABCD); ABCD programs can overlap
- 8 start times per program
- Program Day Cycles include Custom days of the week, Odd, Odd no 31st, Even, and Cyclical dates
- Manual station, program, test program

#### Certifications

UL, CUL, CE, CSA, C-Tick, FCC Part 15

# **Electrical Specifications**

- Input required: 120 VAC ± 10%, 60Hz (International models: 230 VAC ± 10%, 50Hz or 60Hz: Australian Models: 240 VAC ± 10%. 50Hz)
- Power back-up: Lithium coin-cell battery maintains time and date while nonvolatile memory maintains programs
- Multi-valve station capacity: up to 2 solenoid valves per station; simultaneous operation of up to eight solenoids and/or master valves
- Rain Bird residential valves (DV and JTV series) are not compatible with ESP-LXD decoders. Use Rain Bird commercial valves (PGA, PEB, GB, EFB-CP and BPE series).

#### Dimensions (W x H x D)

• 14.32" x 12.69" x 5.50" (36.4 x 32.2 x 14.0 cm)

# **How To Specify**

Controller

**ESP-LXD** 

# Models ESP-LXD: 120v Outdoor

75-station module PBC-LXD: Program Backup Cartridge

Modules & Cartridges

ESPLXD-SM75

Models

IESP-LXD: 230v Intl IESPLXDEU: 230V (EU) IESP-LXDA: 240V (AUS) ESP-LXD Controller Tech Spec

# **ESPLXD-M50 Base Module (included)**

The ESP-LXD is a controller in a cabinet with locking door manufactured with UV-resistant plastics for outdoor use. Included with every ESP-LXD is the ESPLXD-M50 module, a "double-wide" module which snaps onto two adjacent mounts on the controller backplane. The ESPLXD-M50 module includes the lugs for attachment of the two-wire path cables.

Flow Smart software is included with the ESPLXD-M50 module. This includes FloWatch<sup> $\infty$ </sup> featuring a Learn Flow utility, flow usage totalizer, protection for high and low flow conditions with user-defined reactions, FloManager<sup> $\infty$ </sup> for managing hydraulic demand, making full use of available water to shorten total watering time.



SPLXD-M50 Module

# **Optional Accessories for the ESP-LXD Controller**

#### **ESPLXD-SM75 Station Modules**

The ESP-LXD controller can manage up to 50 stations. If additional station capacity is needed, up to 2 ESPLXD-SM75 station modules can be attached to the controller backplane. Each module can manage up to 75 stations.

#### **Station Configuration**

The desired station capacity can be achieved by combining the following modules:

# Stations	ESPLXD-SM75 Modules
1 – 50	0
51 – 125	1
126 – 200	2



ESPLXD-SM75 Module

#### **PBC-LXD Cartridge**

The Program Backup Cartridge installs into the cartridge bay in the back of the controller front panel and adds Backup and Restore and barcode Decoder Address Entry capability. The backup feature allows 8 full backups of all programming and decoder addresses in an ESP-LXD controller. Decoder address entry allows you to attach a barcode scanning pen (sold separately) and scan the peel-off barcode labels from the Programming Chart included with the controller to significantly reduce installation and setup time. A barcode scanning pen, not included with the cartridge, is required for barcode scanning; Rain Bird recommends the Unitech MS100-2 pen with 9-pin female serial connector.



**LXMMPED** 

Metal Pedestal

LXMM

**Metal Case** 

PBC-LXD Cartridge

# **Metal Case & Pedestal**

LXMM / LXMM-PED painted steel and LXMMSS / LXMMSS-PED stainless steel cases and pedestals are available for free-standing controller applications.

#### **Network Communication Cartridges**

NCC Network Communication Cartridges upgrade ESP-LX Series standalone controllers to IQ satellite controllers capable of being controlled by the IQ Platform. The NCC cartridges snap into the back of the controller front panel and provide a communication link between the IQ central computer and the remote site controllers. ESP-LXD can use any of the six available NCC cartridges:

- NCC-PH:Phone
- NCC-RS: RS232
- NCC-GP: GPRS/Cellular
- IQ-DOM2 GPRS/Cellular with one year free service (US only)
- NCC-EN: EthernetNCC-WF: Wi-Fi

NCC-GP Communication Cartridge



# red Rain Bird vireless rain/ WR2-RF

# WR2-RFC Wireless Rain/ Freeze Sensor

# Aunthus

#### **Weather Sensors**

The ESP-LXD supports up to 4 weather sensors, one wired into the ESPLXD-M50 Base Module and up to three additional on the two-wire path interfaced with SD-210 sensor decoders. Supported Rain Bird sensors include the RSD wired rain sensor, the WR2-RC wireless rain sensor, the WR2-RFC wireless rain/freeze sensor and the ANEMOMETER wind sensor (the Rain Bird 3002 Pulse Transmitter is required for use of the ANEMOMETER). Soil moisture sensors that provide a normally closed switch interface are also supported.

Tech Spec ESP-LXD Controller

# **ET Manager™ Smart Cartridge**

The ESP-LXD Controller can be upgraded to a weather adjusted Smart controller with the addition of the ETC-LX ET Manager Cartridge. The ET Manager upgrade kit includes a cartridge that installs in the back of the controller front panel and an antenna that installs through a knock-out in the top of the controller case. The ETM receiver collects hourly weather station sensor data via a wireless paging signal. This data is used to calculate an Evapotranspiration (ET) value and irrigation is automatically adjusted to apply only the amount of water needed.



# **Decoders and the Two-Wire Path**

#### The Two-Wire Path

Decoder-based control systems such as the ESP-LXD interface to valves and other irrigation hardware through decoders along a two-wire path. Although "loop" pattern two-wire installations allow longer wire paths, the "star" pattern is more commonly used. When 14-2 Maxi cable is used, the ESP-LXD supports a wire path of up to 1.65 miles (2.66 km) for "star" pattern installations and up to 6.61 miles (10.63 km) for "loop" intallations.

Protection against water intrusion is essential for two-wire installations. Designed to be impervious to water intrusion, Rain Bird Maxi-Cable™ (double-jacketed) is required for two-wire path installations. Proper splicing technique for all splices along the two-wire path, for splicing decoders to the two-wire path, and for splicing decoders to valves and other hardware is also critical. Splice kits such as the Rain Bird DB (direct burial) connectors should be used.

# **Decoders**

Decoders are installed along the two-wire path to interface to valves and other hardware. The ESP-LXD supports Field Decoders, for control of station valves and master valves, and Sensor Decoders, for interface with flow and weather sensors. All Rain Bird decoders have unique five digit addresses to allow the controller to manage a particular device, such as a valve.

#### **Field Decoders**


Field decoders are used to open and close station valves and master valves used for irrigation and are the most common decoders used in most two-wire installations. Rain Bird offers five field decoder models, including the FD-101 which controls a single valve with a single address and four other models capable of controlling multiple valves:

Decoder Model	Number of Addresses Per Decoder	Maximum Number Of Solenoids Per Address	Maximum Addresses Operating At Once
FD101TURF	1	1	1
FD102TURF	1	2	1
FD202TURF	2	2	2
FD401TURF*	4	1	4
FD601TURF*	6	1	4

<sup>\*</sup> Decoder includes Line Surge Protection.

The ESP-LXD controller supports up to 5 Master Valves, and both Normally Open Master Valves and Normally Closed Master Valves are supported.

The ESP-LXD also supports the use of pumps. These are set up and managed by the controller in the same way as Master Valves, except that the field decoder is wired to a pump start relay instead of to a Master Valve.

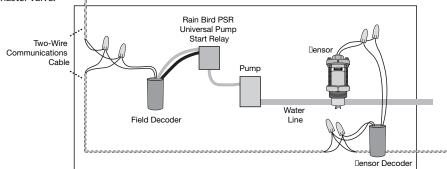

Rain Bird recommends using the FD-101 field decoder for most pump start relays and a FD-102 for larger pumps (3/4 HP and greater).

## **Sensor Decoders**

Rain Bird also offers a SD210TURF sensor decoder to interface to weather sensors or flow sensors. When a SD-210 is wired to a weather sensor along the two-wire path, it provides constant real-time monitoring of the weather sensor status. A SD-210 wired to a flow sensor monitors the current flow rate at a flow monitor by sending pulses to the controller.

# **Surge Protection**

Proper grounding and surge protection is essential for two-wire installations. A two-wire path must be surge protected and grounded every 500 feet (150 meters) or every 8 decoders, whichever is smaller. The LSP1TURF Line Surge Protector is used for this purpose, but the FD-401 and FD-601 field decoders include line surge protection so LSP-1s are unnecessary when grounded FD-401 and FD-601 field decoders are used. Since LSP-1 Line Surge Protectors are used for surge protection only, they do not have decoder addresses.





# **Specifications**

The ESP-LXD Controller shall be of a hybrid type that combines electro-mechanical and micro-electronic circuitry capable of fully automatic or manual operation. The controller shall be housed in a wall-mountable, weather-resistant plastic cabinet with a key-locking cabinet door suitable for either indoor or outdoor installation. The controller shall have the ability to be programmed and operated in any one of six languages: English, Spanish, French, German, Italian, & Portuguese. The display shall show programming options and operating instructions in the chosen language without altering the programming or operation information.

The controller shall have a base station capacity of 50 stations with two additional expansion slots capable of receiving ESPLXD-SM75 station modules to create a controller capacity of up to 200 stations. All stations shall have the capability of independently obeying or ignoring any weather sensor as well as using or not using the master valves. Station timing shall be from 0 minutes to 12 hours. The controller shall have a Seasonal Adjustment by program which adjusts the station run time from 0 to 300% in 1% increments. The controller shall also have a Monthly Seasonal Adjustment of 0 to 300% by month. Station timing with Seasonal Adjustment shall be from 1 second to 16 hours.

The controller shall have 4 separate and independent programs which can have different start times, start day cycles, and station run times. Each program shall have up to 8 start times per day for a total of 32 possible start times per day. The 4 programs shall be allowed to overlap operation based on user defined settings which control the number of simultaneous stations per program and total for the controller.

The controller shall allow up to 8 valves to operate simultaneously per program and total for the controller including the master valves.

The controller shall have a 365-day calendar with Permanent Day Off feature that allows a day(s) of the week to be turned off on any user selected program day cycle. (Custom, Even, Odd, Odd31, & Cyclical). Days set to Permanent Day Off shall override the normal repeating schedule and not water on the specified day(s) of the week. The controller shall also have a Calendar Day Off feature allowing the user to select up to 5 dates up to 365-days in the future when the controller shall incorporate a Rain Delay feature allowing the user to set the number of days the controller should remain off before automatically returning to the auto mode.

The controller shall have Cycle+Soak water management software which is capable of operating each station for a maximum cycle time and a minimum soak time to reduce water runoff. The maximum cycle time shall not extended by Seasonal Adjustment.

The controller shall incorporate a FloManager feature providing real-time flow, power, and station management. FloManager shall manage the number of stations operating at any point in time based on water source capacity, station flow rate, number of valves per station; user-defined simultaneous stations per program and for the controller. FloManager shall incorporate the ability to provide station priorities to determine the order in which stations shall operate. The controller shall ignore the station number and instead operate the highest priority stations first and the lower priority stations last when FloManager is enabled. FloManager shall be an option that is disabled by default and the

controller shall operate zones in order of station number, started with the lowest numbered zone set to irrigate and ending with the highest number zone.

The controller shall offer Water Windows for each program. This function sets the allowed start and stop time where watering is allowed. If the watering cannot be completed by the time the Water Window closes, the stations with remaining run time are paused and watering automatically resumes when the Water Window opens the next time.

The controller shall include an integrated Flow Smart Module with flow sensing functionality. The Flow Smart Module shall accept sensor decoder input from 1 - 5 flow sensors with no flow scaling device required.

A FloWatch Learn Flow Utility which learns the normal flow rate of each station shall be included. Each time a station runs FloWatch compares the current real-time flow rate to the learned rate and takes user-defined actions if high flow, low flow, or no flow is detected. FloWatch shall automatically determine the location of the flow problem and isolate the problem by turning off the affected station(s) or master valve(s). FloWatch shall be compatible with both normally closed and open master valves. A Manual Master Valve Water Window shall be provided to coordinate daytime manual watering with the flow sensing. This Water Window shall offer programmable days of the week and manual watering additional flow rate.

#### **Rain Bird Corporation**

6991 E. Southpoint Road Tucson, AZ 85756 Phone: (520) 741-6100 Fax: (520) 741-6522

Rain Bird Technical Services (800) RAINBIRD (1-800-724-6247) (U.S. and Canada)

#### **Rain Bird Corporation**

970 West Sierra Madre Avenue Azusa, CA 91702 Phone: (626) 812-3400 Fax: (626) 812-3411

**Specification Hotline** 800-458-3005 (U.S. and Canada)

### Rain Bird International, Inc.

1000 West Sierra Madre Ave. Azusa, CA 91702 Phone: (626) 963-9311 Fax: (626) 852-7343

The Intelligent Use of Water™ www.rainbird.com